 


VESTABOARD

**SPECIFICATIONS AND
INSTALLATION GUIDE**



**Inspire From
Anywhere**

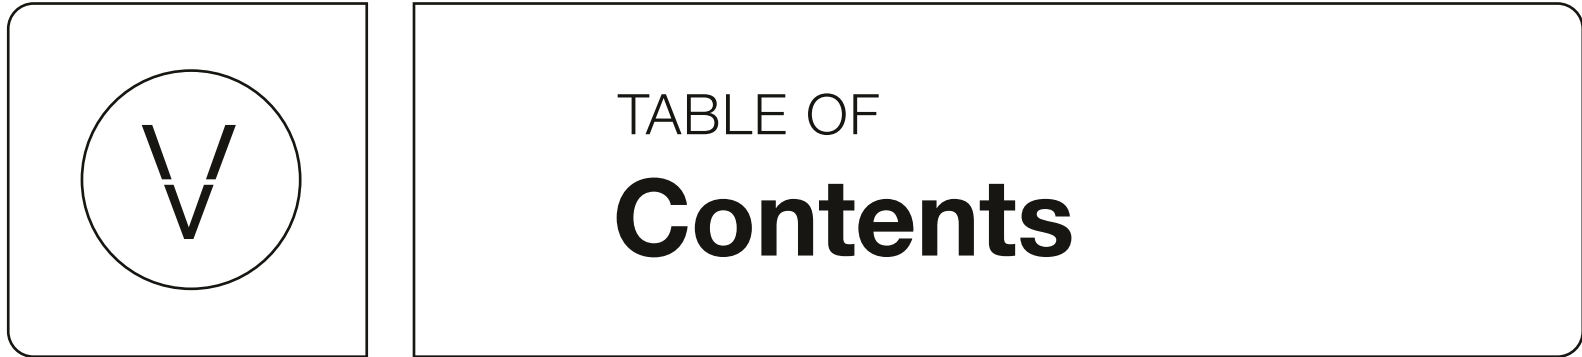

SPECIFICATIONS

Technical Specifications	5
Components	6

INSTALLATION


Power	8
Mounting	9
Pairing	11

**SUPPORT, SERVICE
AND WARRANTY**

Customer Support	15
Warranty	16

V

 SPECIFICATIONS

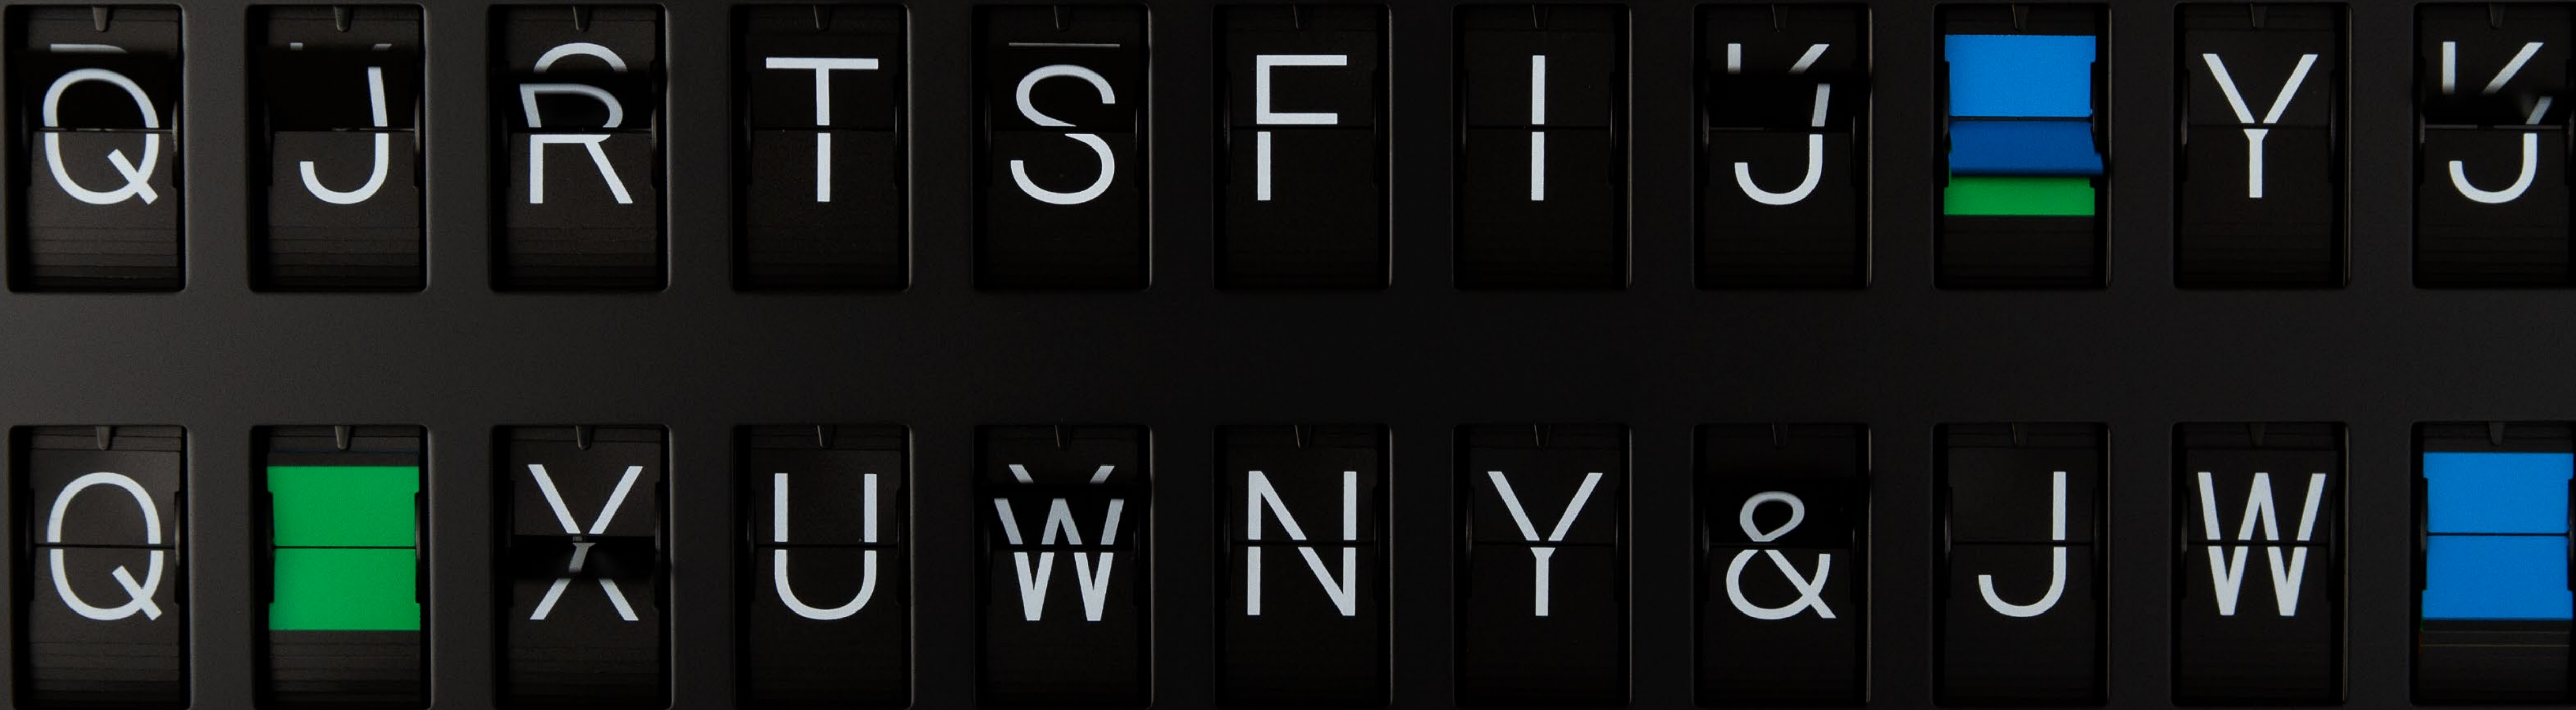

SPECIFICATIONS

Technical Specifications

Characters

- 56 alphanumeric characters
- 8 color characters (B,W,R,O,Y,G,B,V)
- Displays up to 132 characters at once

Color

■	Black on Aluminum	
■	Poppy Red	(PMS 485 C)
■	Orange	(PMS 2018 C)
■	Yellow	(PMS 1235 C)
■	Green	(PMS 347 C)
■	Paris Blue	(PMS 2173 C)
■	Violet	(PMS 526 C)
■	White	(White C)
■	Black	(PMS 426 C)

Connectivity


802.11 a/b/g/n embedded Wi-Fi / Ethernet port

Size

41.2	inches wide	(1046 mm)
22	inches tall	(561 mm)
3.5	inches deep <i>with mount</i>	(89 mm)
3.2	inches deep <i>without mount</i>	(81.5 mm)

Weight

45	pounds	(20.4 kg)	<i>without frame</i>
55	pounds	(24.9 kg)	<i>with frame</i>
<i>Frame is required but removable for installation and service</i>			

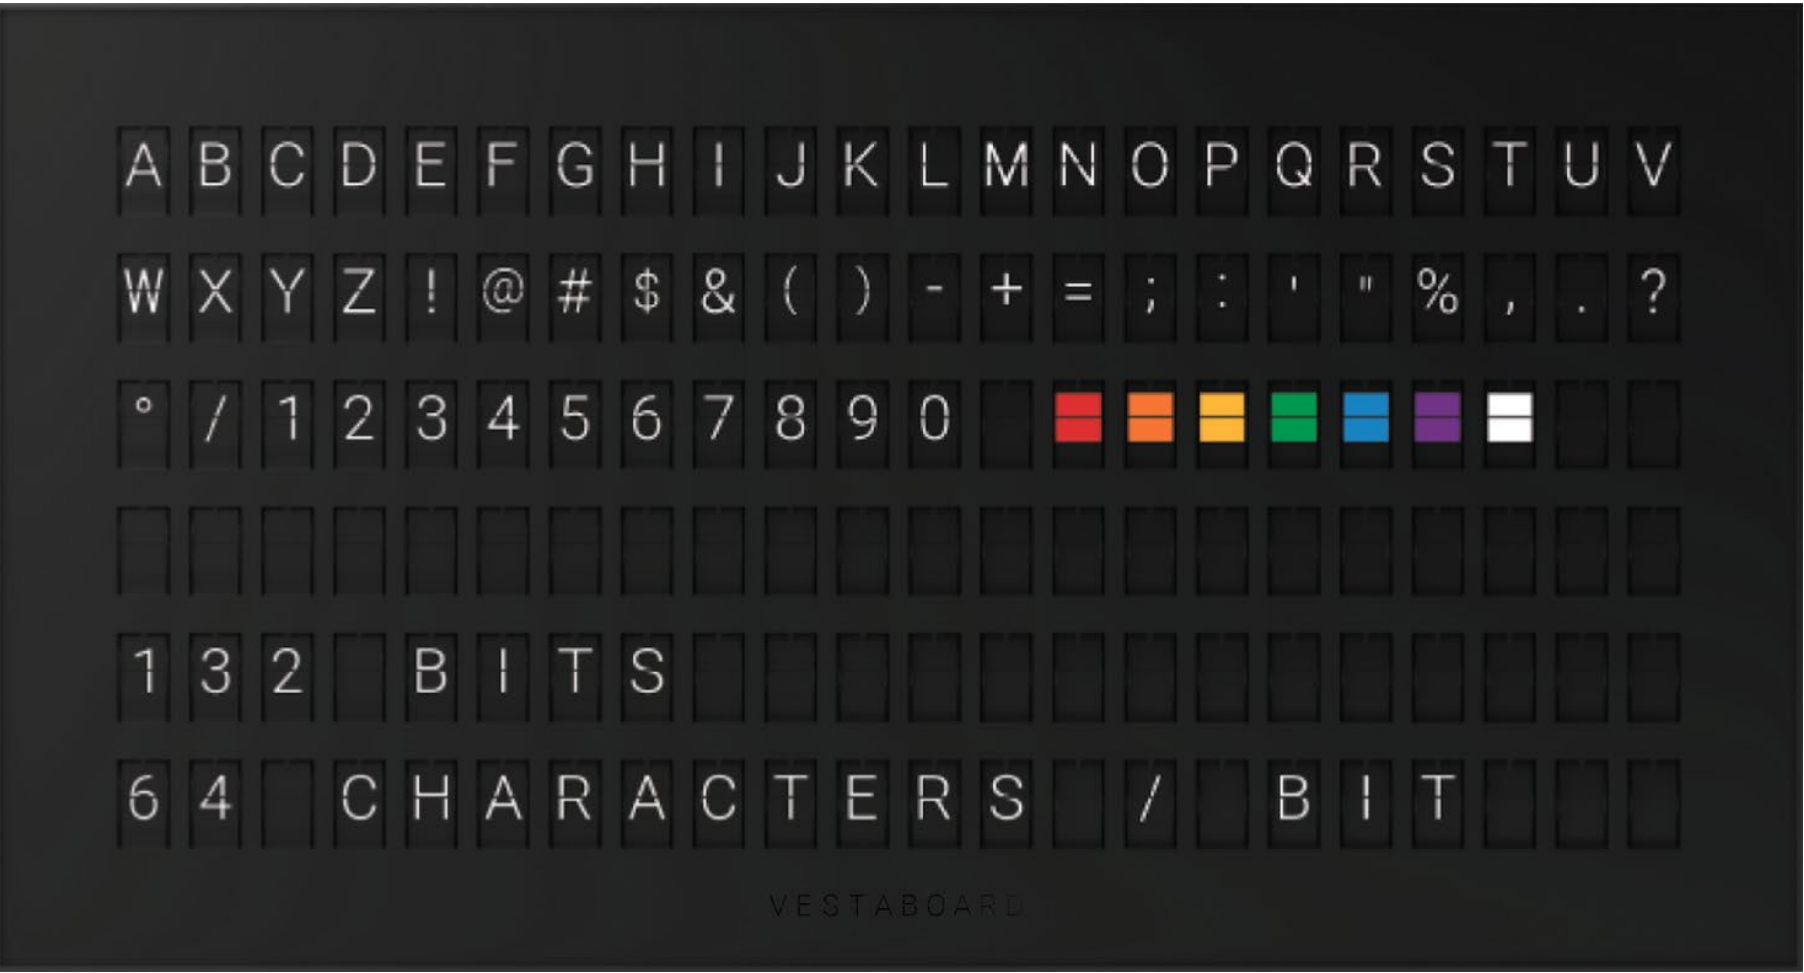 

6

SPECIFICATIONS

Components

Wall Plate

The included wall plate is secured to the wall. The included and attached brackets (see page 10) easily hook onto the wall plate for easy installation.

Backplane

The backplane houses all of the electronics, connectivity and power needs of Vestaboard. It also holds all of the Bits.

 
Bits

 
Vestaboard consists of 132 Bits, with each capable of displaying 64 die-cut characters (including letters, symbols, numbers and colors). Each Bit can easily be replaced by hand and without tools, if necessary, by removing the frame.

Characters are visible from over 50 feet (15 m).


Frame

The Vestaboard frame is made from beautifully finished 5052-H32 and 6063 aluminum. You can remove the frame to access the backplane and Bits if necessary.

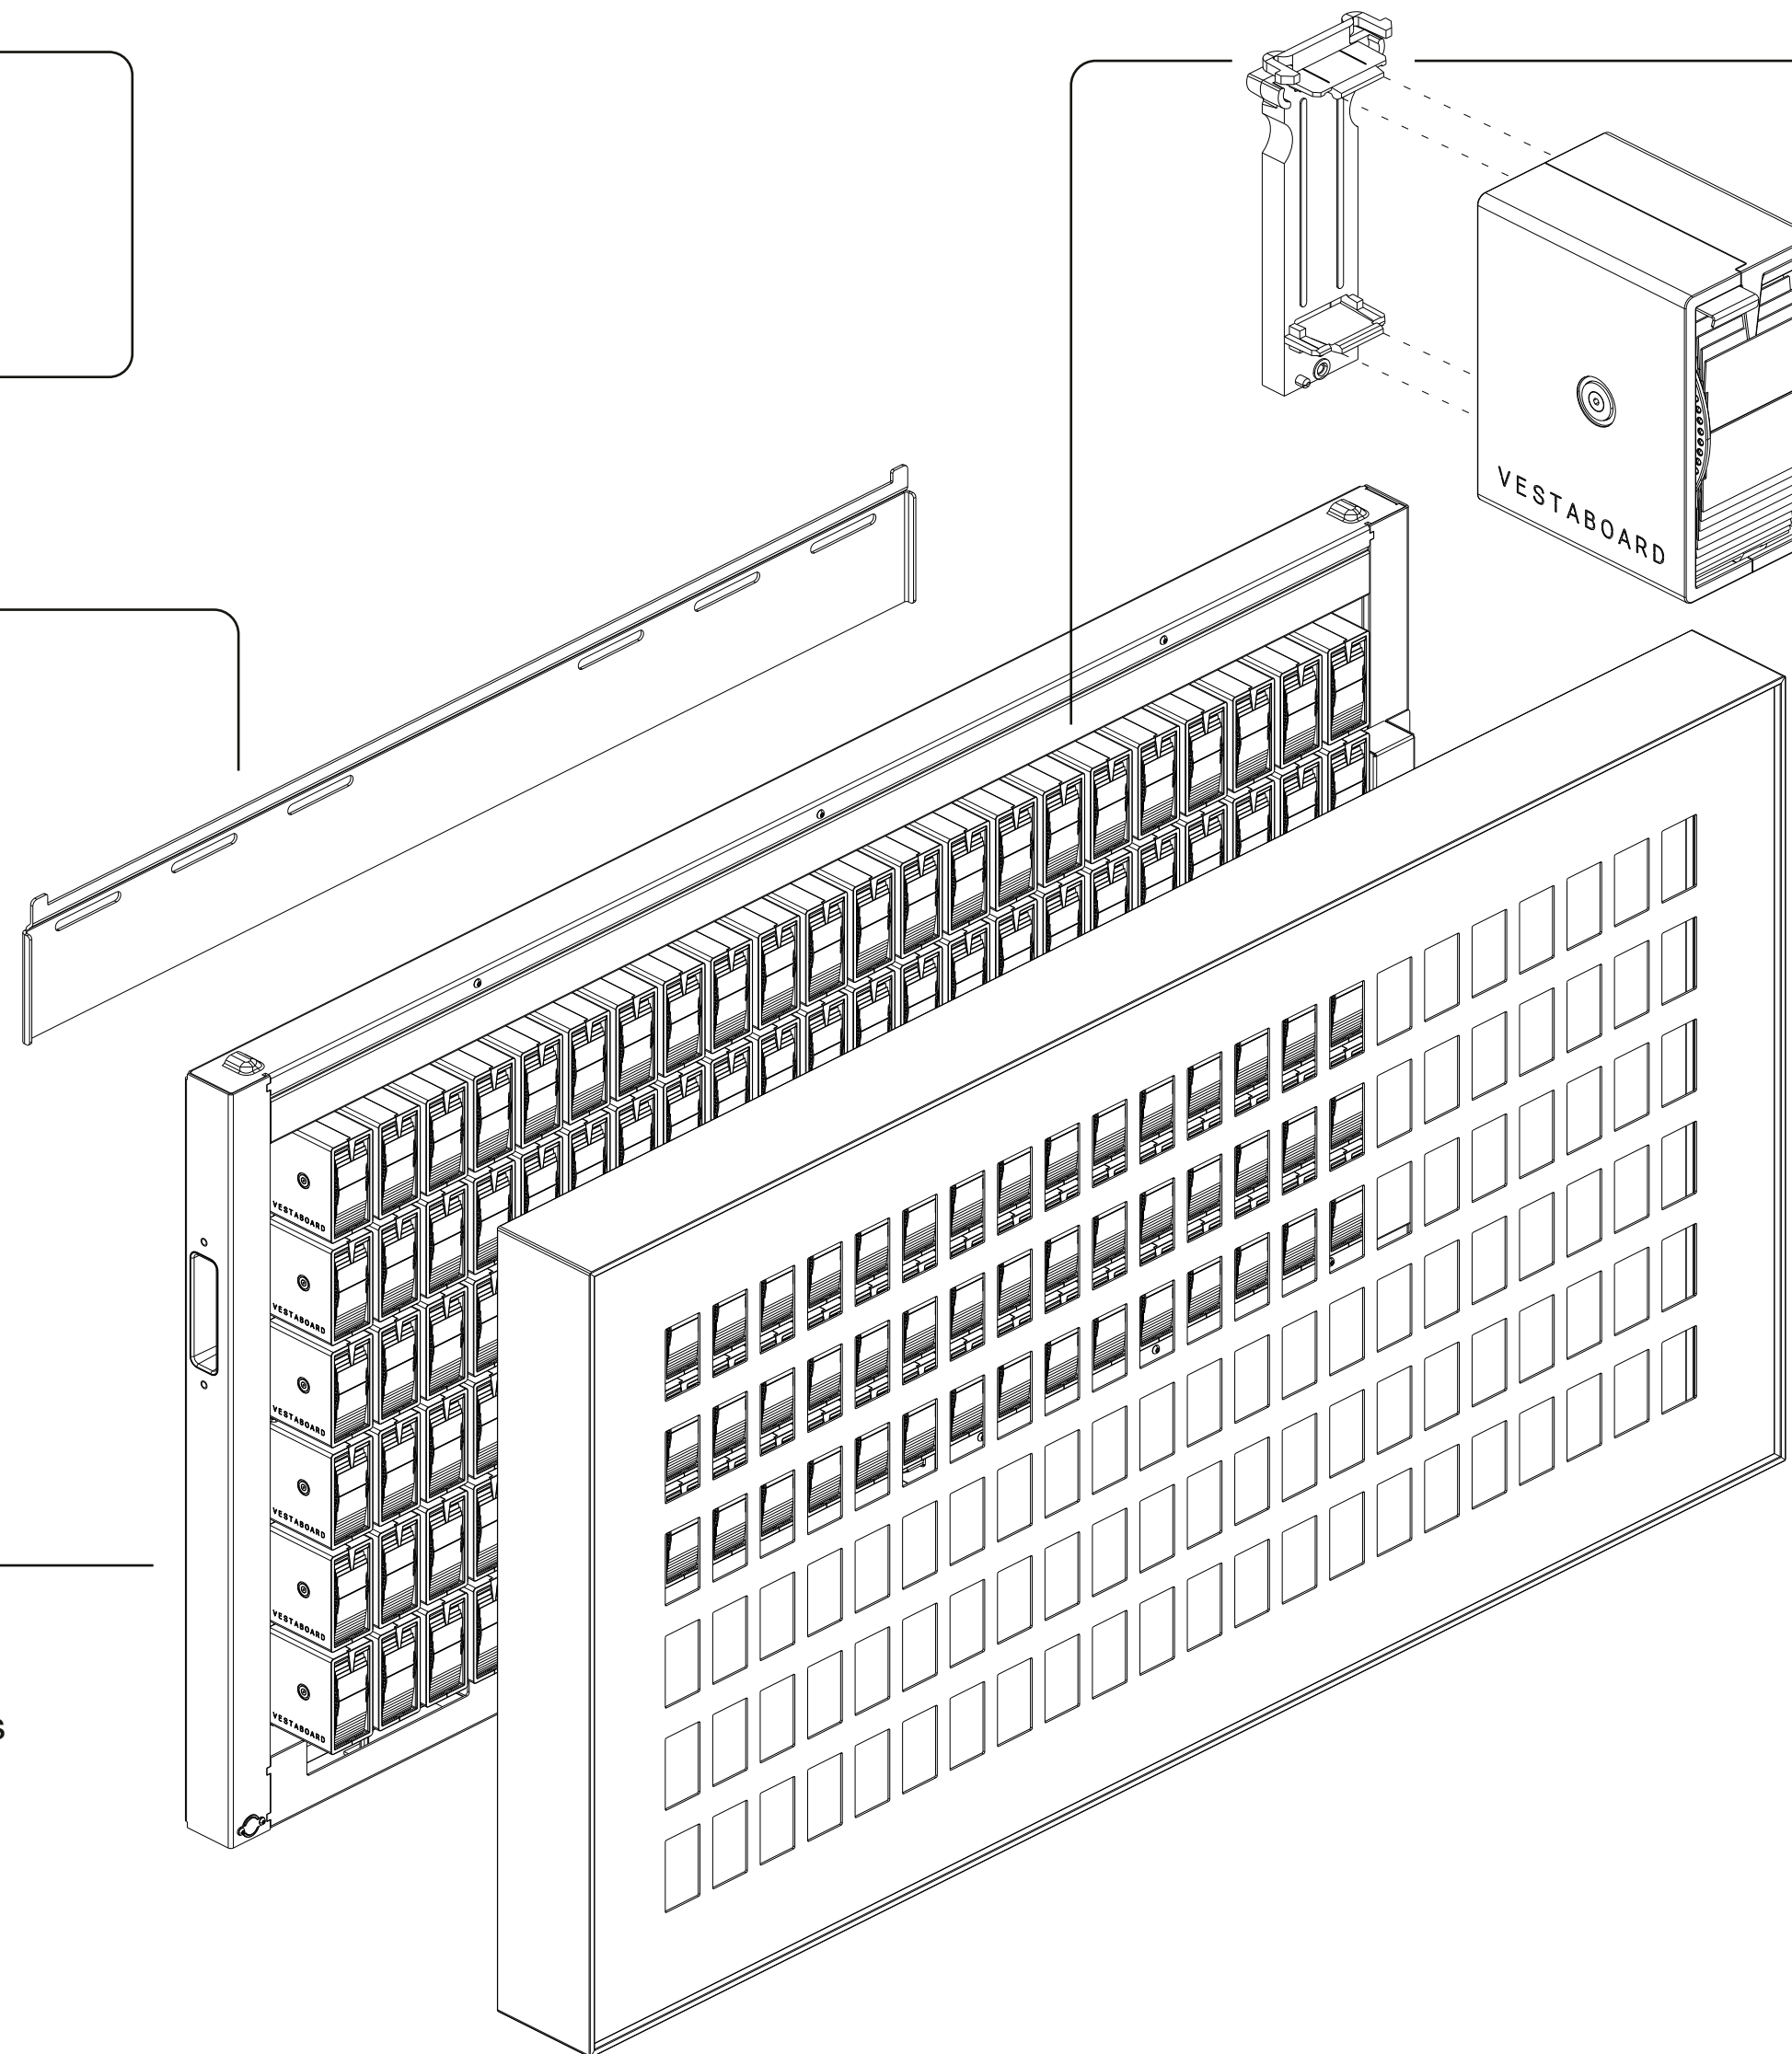

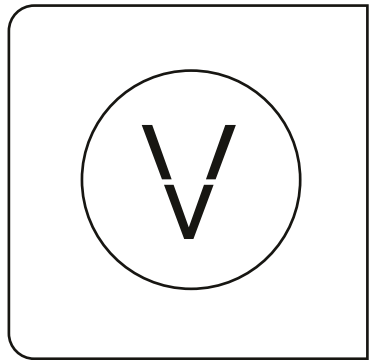

INSTALLATION

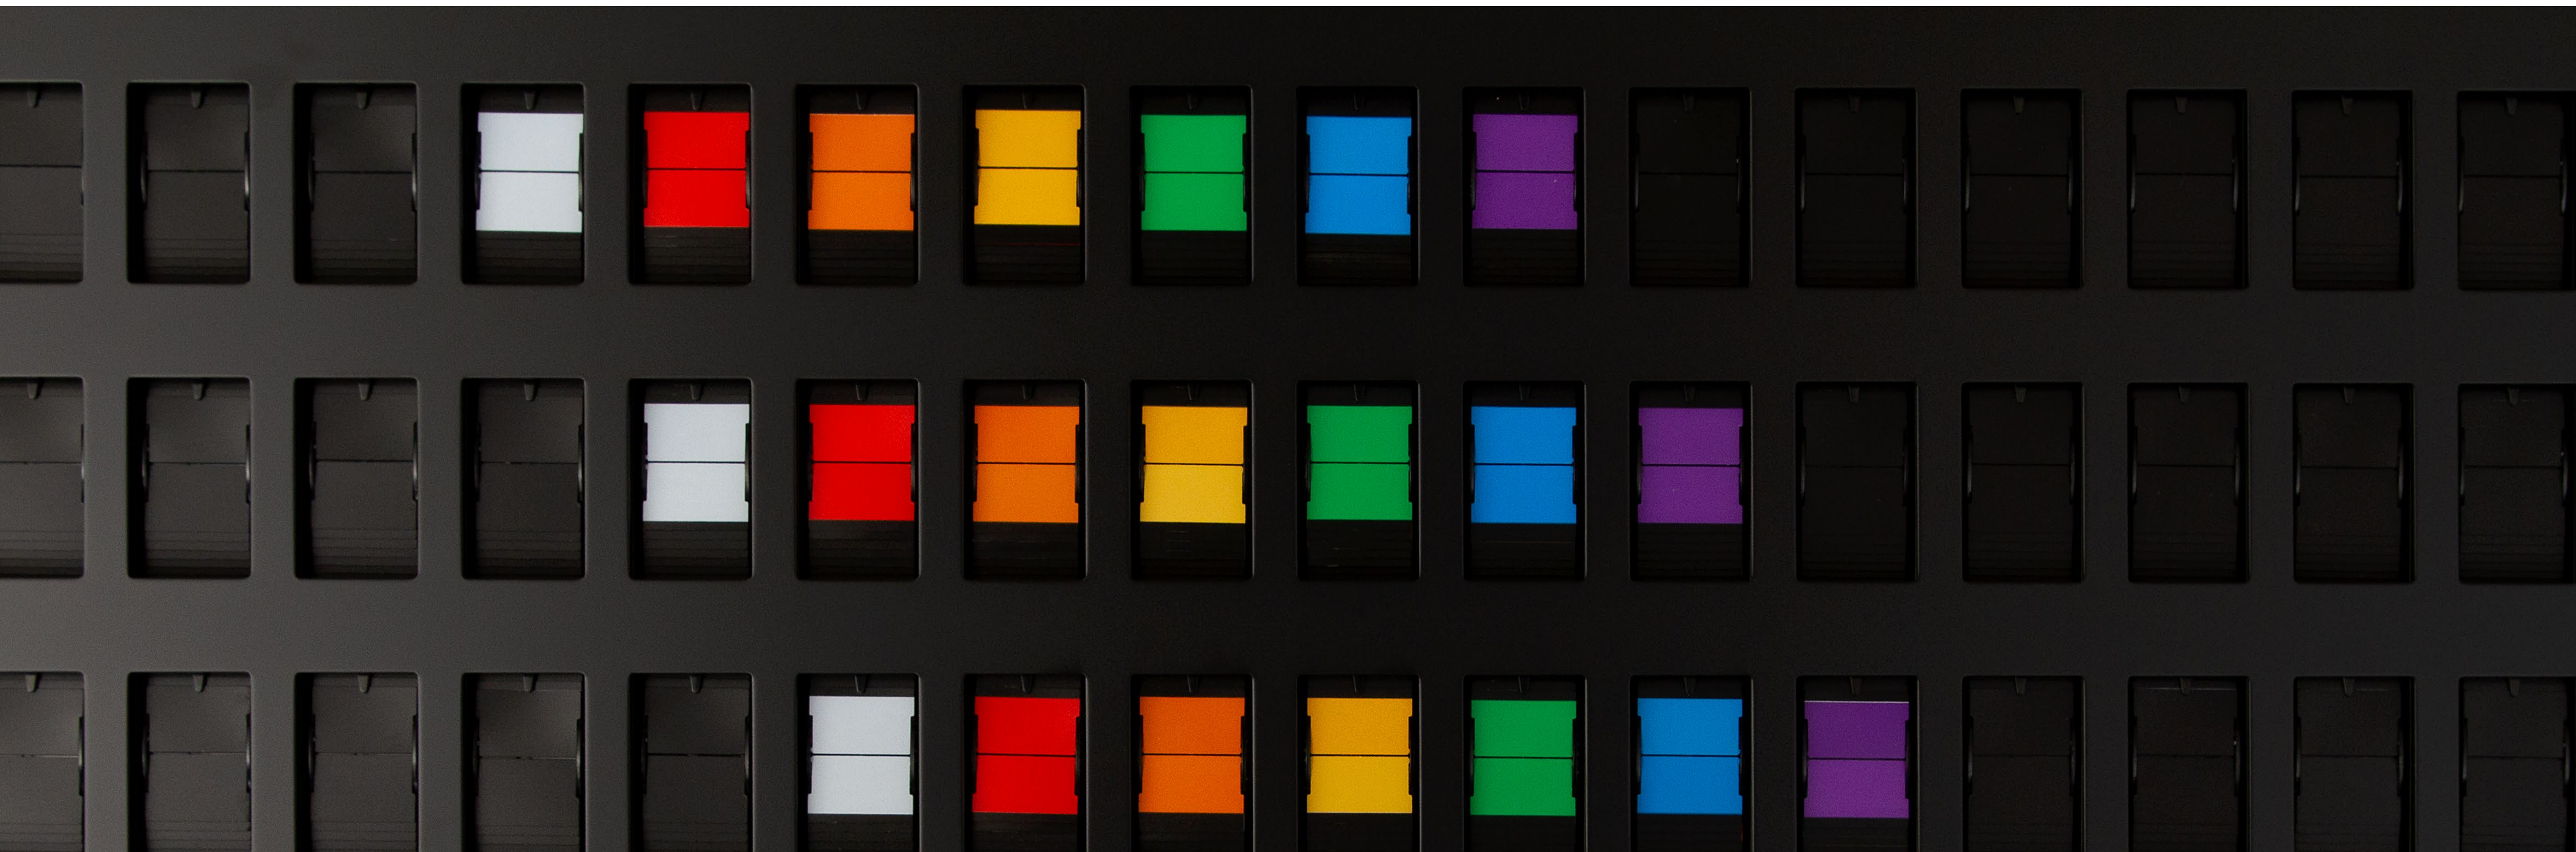 

8


INSTALLATION

Power


Power supply

- Supports 110-240V for North America and internationally
- Uses 121 watts when updating message
- Low power usage while messages are displayed
- 19.7" (0.5m) "Mickey Mouse" (IEC 320 C5) power cable included for wall mount installation
- Longer power cable lengths available for purchase

 
Type I

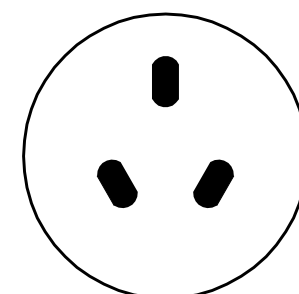


Type E

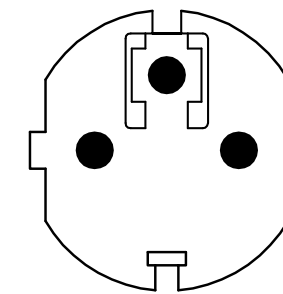 


Type B

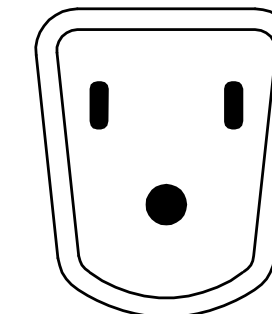 

Type G

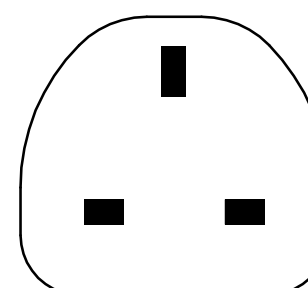 

Type J

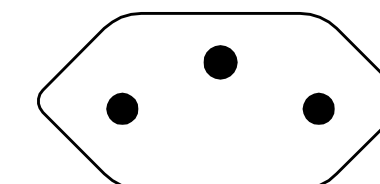 

9

INSTALLATION Mounting

Vestaboard must be installed using the included wall plate system or on a 400mm x 400mm VESA compatible display mount or stand. Vestaboard cannot be placed on a table or surface without an appropriately rated VESA compatible display system, or it will fall over. The power outlet should be located either behind or below the Vestaboard as seen on this page.

 
The included wall plate is to be secured to the wall and properly mounted into a wood stud or concrete wall. You are responsible for proper installation of the wall plate based on the type of wall. If you are unsure how to mount your Vestaboard, our nationwide network of trained technicians is here to help:

Email: support@vestaboard.com

Web: vestaboard.com/installation


Recessed Wall Outlet Behind Vestaboard

For optimal results, we recommend installing a recessed outlet behind the Vestaboard.

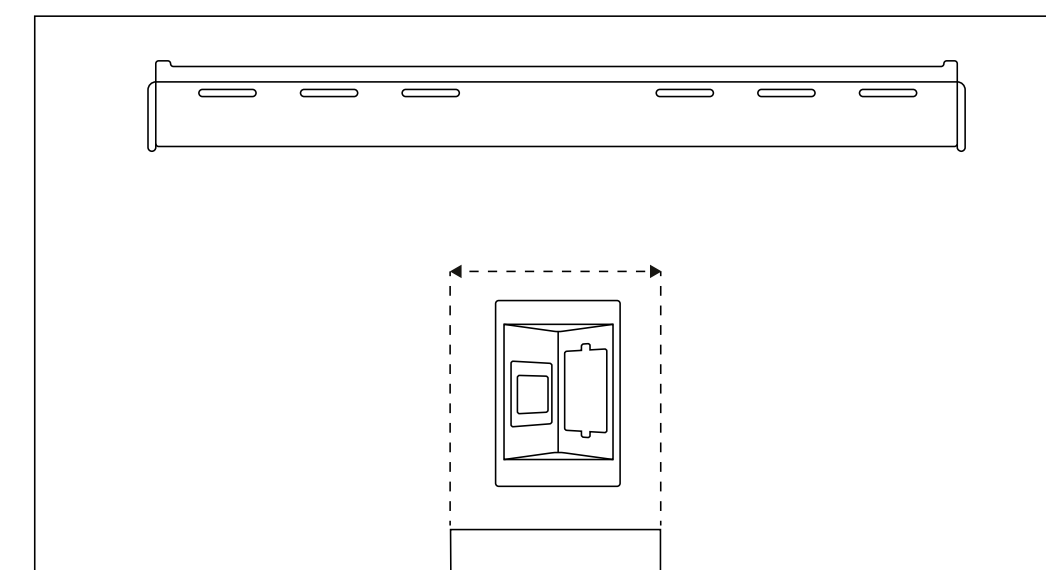


Standard Wall Outlet Behind Vestaboard

 It is also possible to conceal power by placing a standard wall outlet horizontally at the bottom of the Vestaboard as seen.

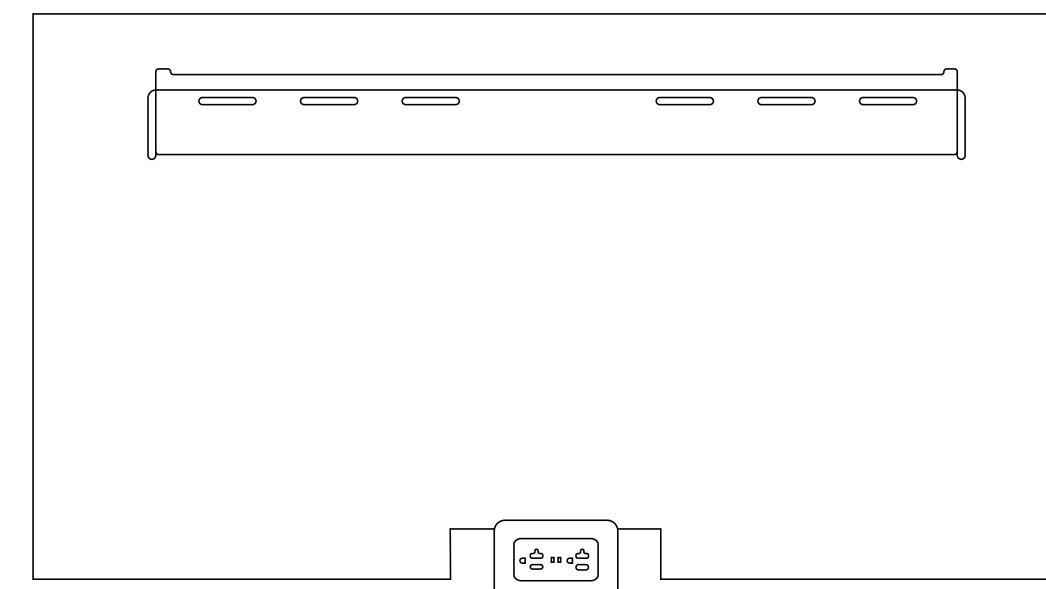

Standard Wall Outlet Below Vestaboard

 Longer accessory power cables will be available for purchase for other installations where the outlet is below the Vestaboard. Contact us directly with any unique cord length requests.

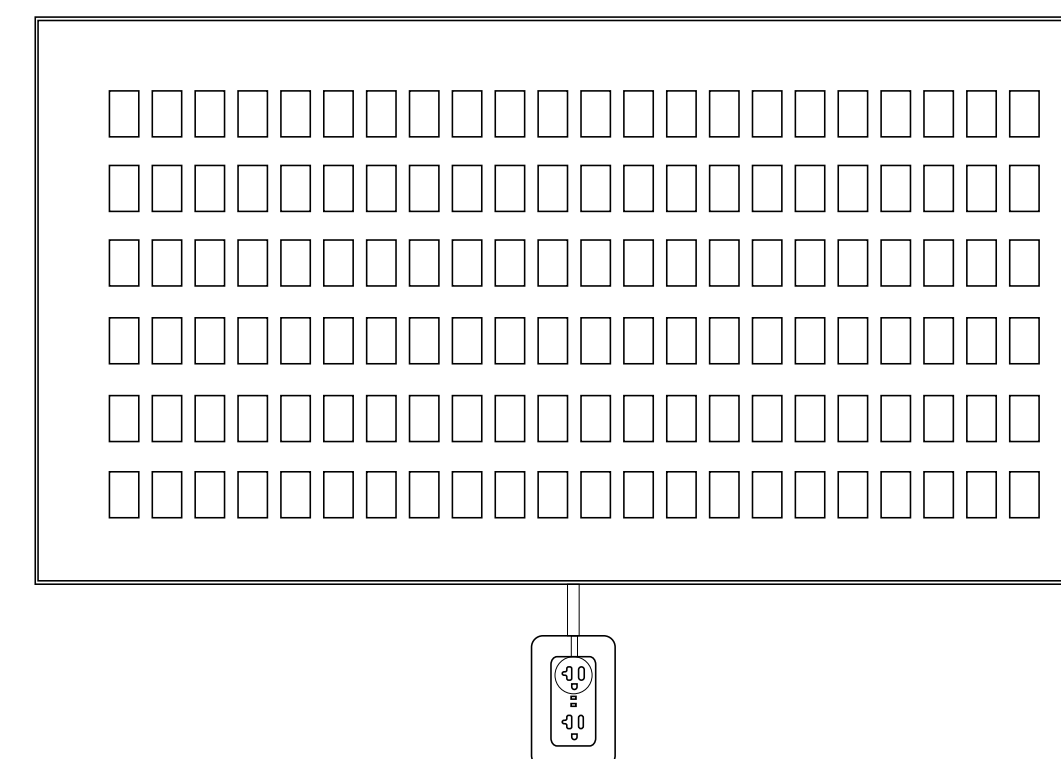

10

INSTALLATION

Mounting

Vertical Rails

The vertical rails are pre-attached. They are removable to allow the Vestaboard to be mounted with any 400mm x 400mm VESA compatible mounting system.

Wall Plate

The included wall plate is secured to the wall. Vestaboard must be properly mounted into a wood stud or concrete wall.

Important - You are responsible for proper installation of the wall plate based on the type of wall. If you are unsure how to mount your Vestaboard, our nationwide network of trained technicians is here to help!

 
Power Jack

Vestaboard supports 110V-240V at 50-60 Hz for North America and International, and will ship with a 19.7" (0.5m) IEC 320 C5 power cable with additional cable lengths available.

Ethernet Port

Vestaboard works with WiFi with an alternative Ethernet port if desired.

Vestaboard backplane

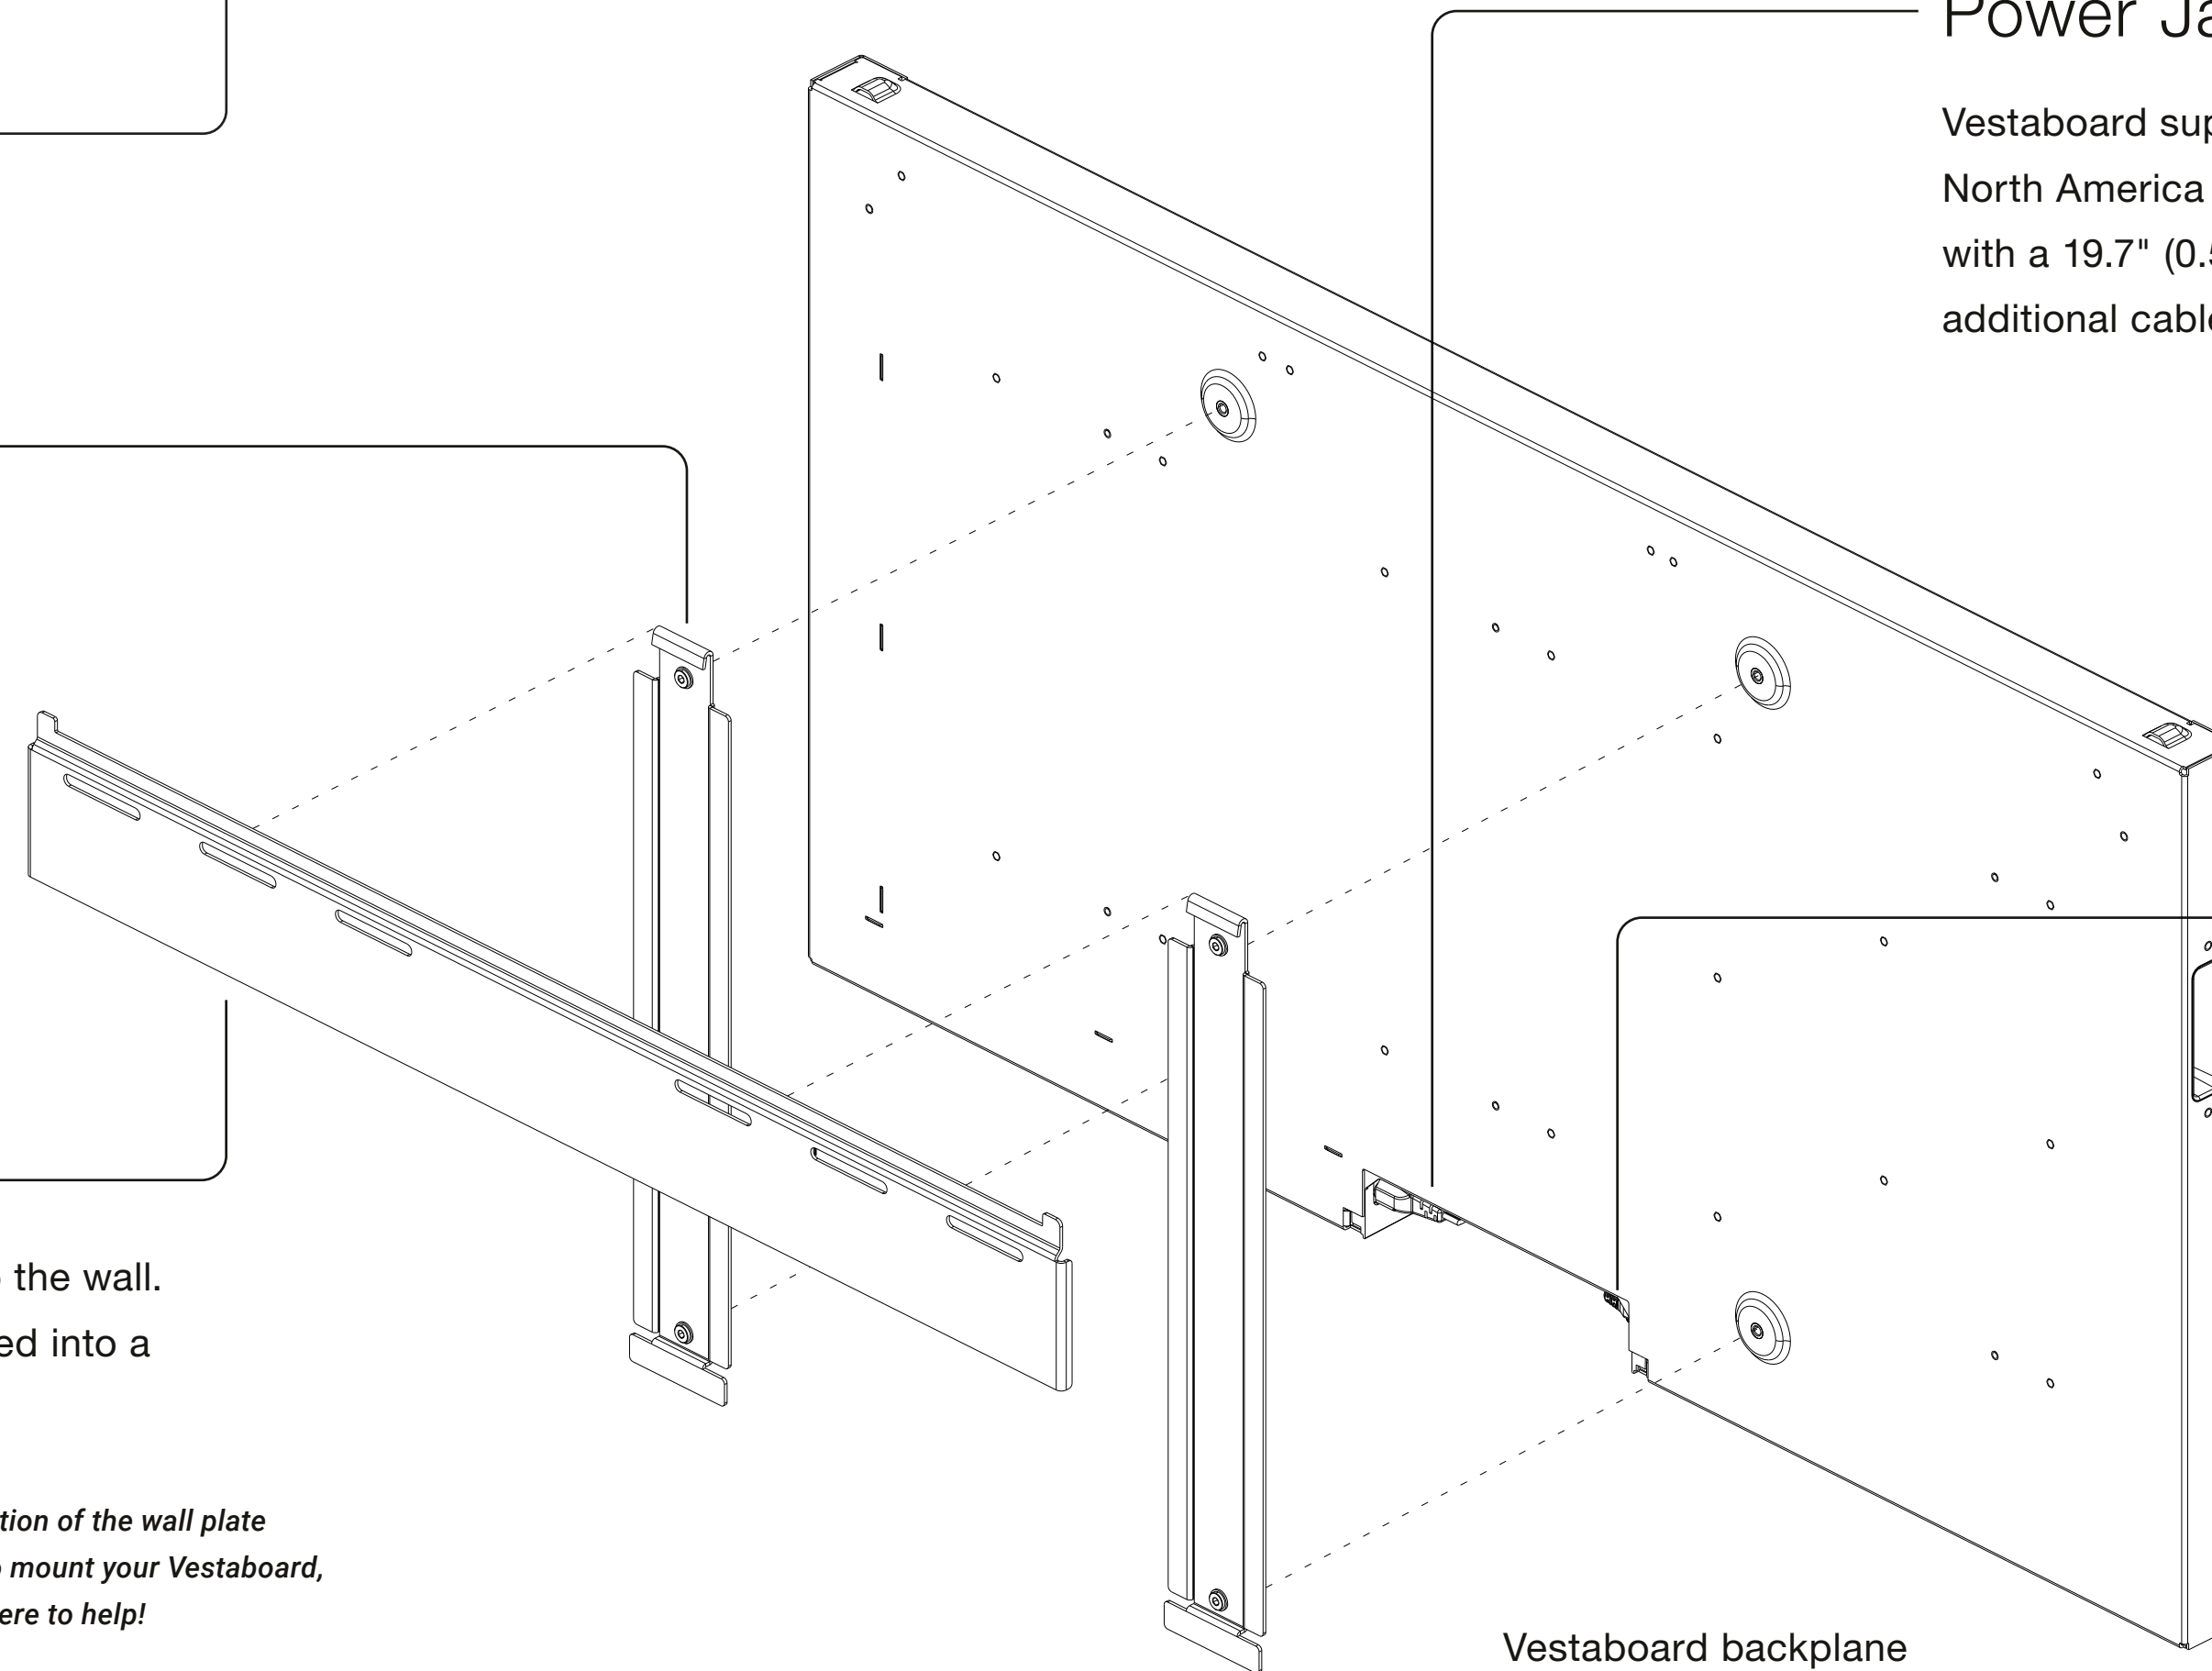

INSTALLATION

Pairing

 
 
1 Create or sign into account

Download the Vestaboard app at vestaboard.com/app and create an account. If you already have an account, simply sign in once the app is installed on your device.



2 Enter Pairing Code

When powered on for the first time, your Vestaboard will automatically display a unique 6-character code to be used to pair directly with your user account.

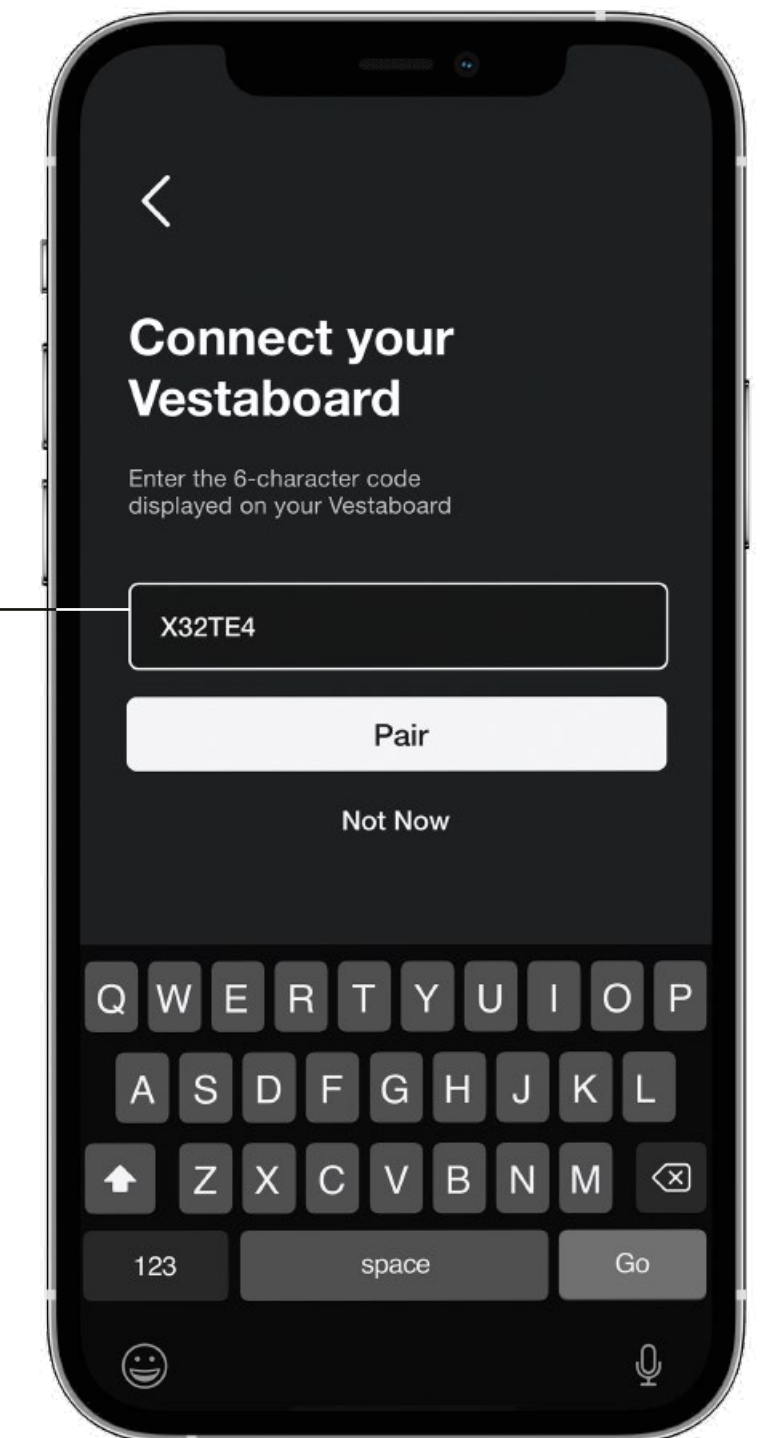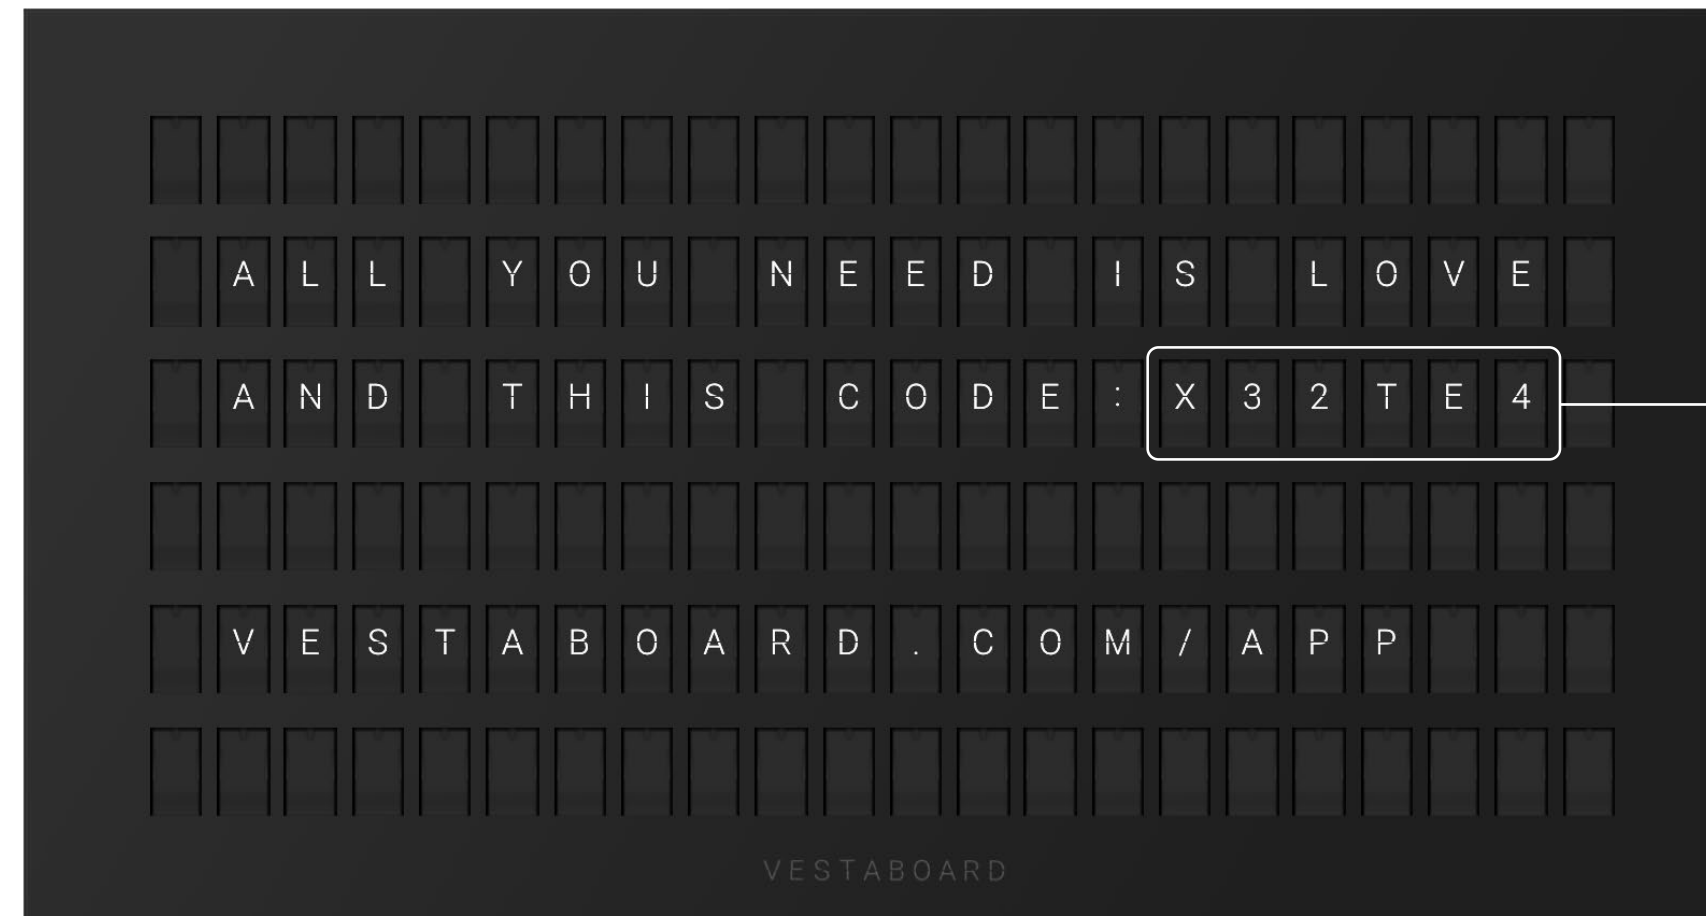

12

INSTALLATION

 
 
Pairing

3 Connect to a network

From your device, choose either an ethernet or Wi-Fi network connection for your Vestaboard. If Wi-Fi, your Vestaboard will connect after a hotspot passes the selected Wi-Fi password credentials to your Vestaboard.

4 Assign a name

The final step before sending your first message is to assign a name to your Vestaboard. Consider naming it after the room or space it is installed in.

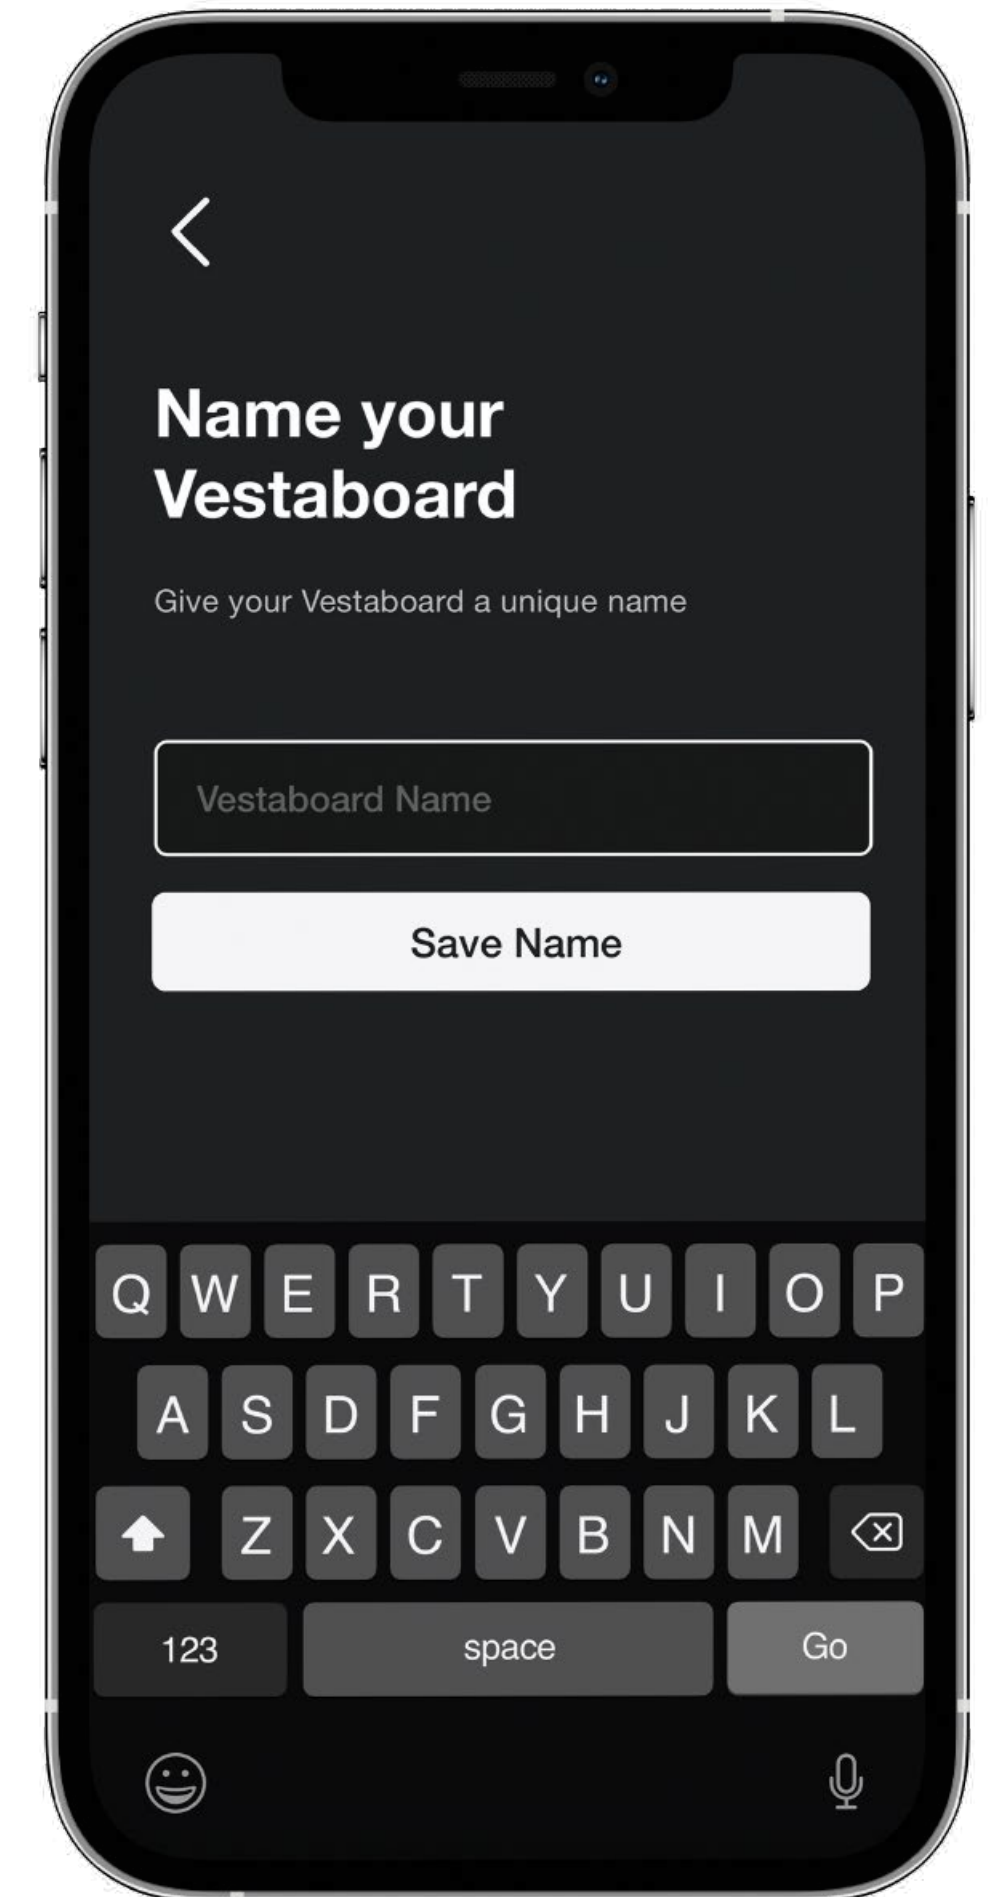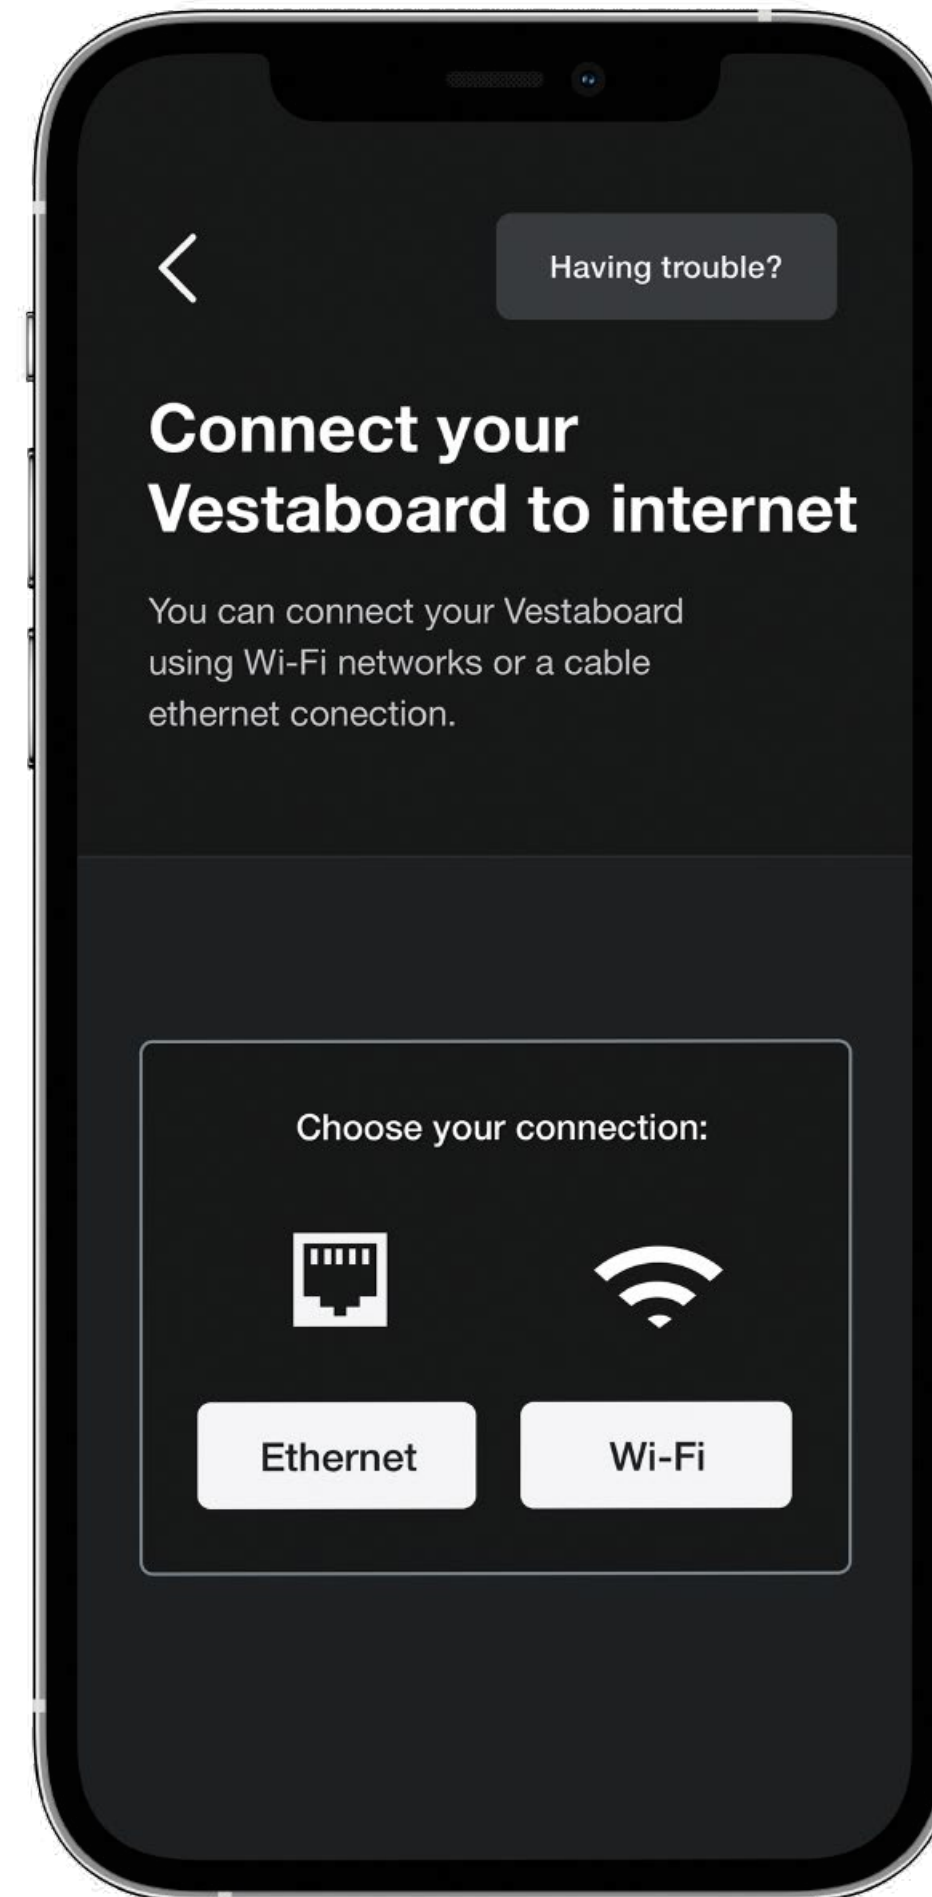



5 Send a message

Your Vestaboard is now ready to receive its first message from your device. Select one of our suggestions or create your own to connect and inspire.

6 Share with us

Email a picture of your Vestaboard displaying its first message to us at **support@vestaboard.com** or tag us on instagram **@vestaboard**

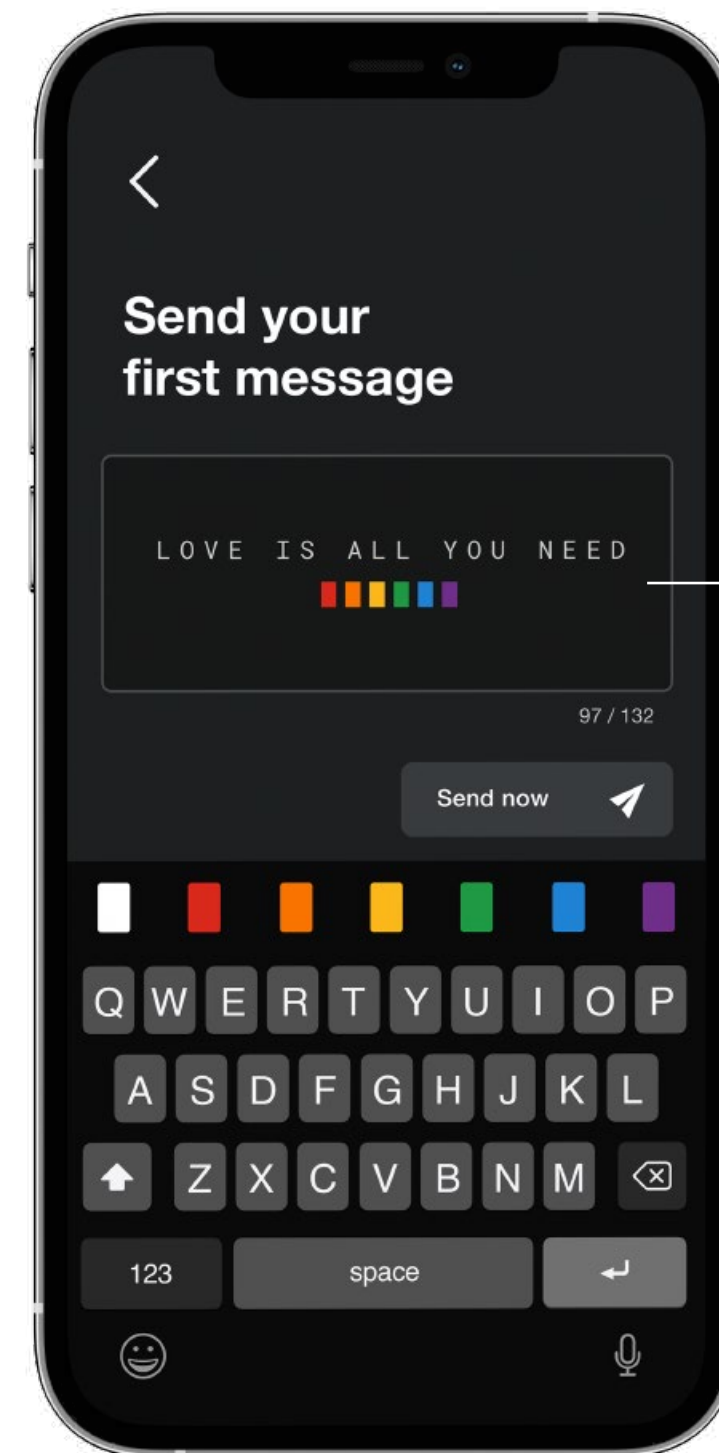 


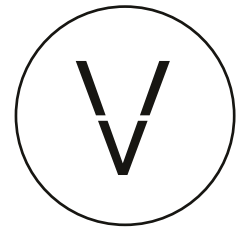 

**SUPPORT, SERVICE
AND WARRANTY**



 Customer Support

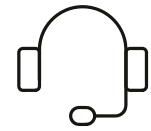

Real-Time Support

Whether a home, business or partner, you'll get fast and friendly free support. Vestaboard offers free telephone support for the first 90 days. Free web, email and chat support is available for the life of your Vestaboard.

Phone: +1 615.212.9338

Email: support@vestaboard.com

Support: vestaboard.com/help



Professional Installation and Service in United States/Canada

Vestaboard relies on a network of technicians who are trained to install, repair, maintain or replace your Vestaboard.

Professional installation includes proper mounting of the Vestaboard on a specified wall, but does not include installation of the power outlet/socket. Contact us for more information.

Learn More: vestaboard.com/installation



Rest of World

Vestaboard has not made provision for service in the rest of the world. In the future we expect to make plans for services in the United Kingdom, Australia, Western Europe and other countries.

Contact Us: vestaboard.com/contact

16

SUPPORT, SERVICE AND WARRANTY

Warranty

Included Two-Year Limited Warranty

Your Vestaboard is protected by a limited parts and labor warranty for two years for non-commercial use. In the event that a Bit needs to be replaced, Vestaboard will send a replacement Bit promptly upon receipt of the defective Bit. Our warranty is non-transferable and is limited to the original Vestaboard owner.

For a complete description of the Vestaboard limited warranty, please see vestaboard.com/warranty





Thank you

